



Mapa de funções DCC para locomotivas CP 1960 equipadas com decoder de som ESU Loksound V4.

- F0** - Front Lights
- F1** - Sound On/Off
- F2** - Airhorn Long
- F3** - Airhorn Short
- F4** - Headlight Front
- F5** - Headlight Back
- F6** - Acceleration, Switching Mode
- F7** - Air
- F8** - Fan
- F9** - Switch
- F10** - Sanding
- F11** - Coupler
- F12** - Station announcement REFER
- F13** - Station announcement CP
- F14** - Curve squeal
- F15** - Switch-Flange
- F16** - Rail clack (1 of 2)
- F17** - Rail clack (2 of 2)
- F18** - Diesel notch up
- F19** - Diesel notch down
- F20** - Heavy load